

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


HONDA FIT / JAZZ 2nd GE6/7/8/9

PART NO. 8656

Contents 內含配件

※ Please apply hand tools for installation
安裝過程請使用手動工具

1. Rear Sway Bar 28mm 前防傾桿 28mm 1PCS
2. Bracket 防傾桿固定C型座 2PCS
3. Stabilizer Bush 防傾桿固定橡皮 2PCS

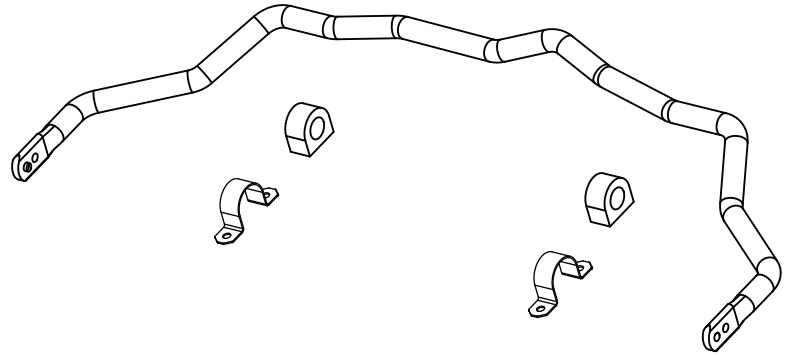

Installation tips 安裝提示

※ Please read the HARDRACE Tech Tips before installing the products.
在安裝之前請詳閱 HARDRACE 技術提示



Recommended Torque for bolts/nuts
螺絲/帽鎖緊扭力參考

M8	60Nm
M10	80Nm
M12	90Nm
M14	140Nm


※ Removal of front cross-member is suggested for easier installation.
更換防傾桿，建議拆卸前樑方式安裝



Dedicated stabilizer bush and bracket.
專用橡皮及C型固定座



Stiffness adjustable
可調軟硬

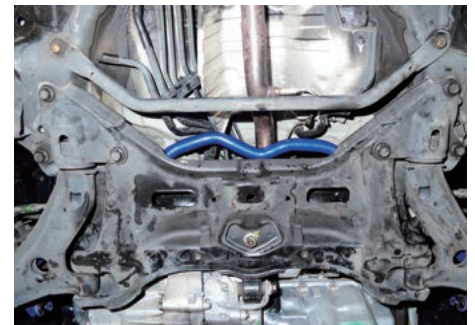

Alignment is required after installation.
安裝後請務必完成電腦四輪校正

HARDRACE Tech Tips 技術提示

Warning! Risk of Death may be caused by vehicle slipping or toppling off the jacking platform.

警告! 在頂車機的作業下，車輛的滑動或倒塌可能會造成人員致命的危險

Motor vehicle mechanical knowledge is expected. In some country & states, fitment may only be legally performed by a licensed mechanic. Check the regulation in your area.

請預先了解車輛機械知識與檢察在您所屬的國家或區域地方是否需要專業技師執照才可執行更換安裝，以免觸法

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊



TEL: +886 3 5370822 FAX: +886 3 5373027
E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

