

Installation Guide

安裝說明書

VEHICLE APPLICATIONS
適用車型


TOYOTA C-HR 2017–present

PART NO. 8902

Contents 內含配件

※ 安裝過程請使用手動工具

1. 避震器塔座支架(左/右) 2PCS
2. 鋁合金橫桿 1PCS
3. 配件螺絲 (M6x1.0x20) 4PCS
4. 配件華司 6PCS

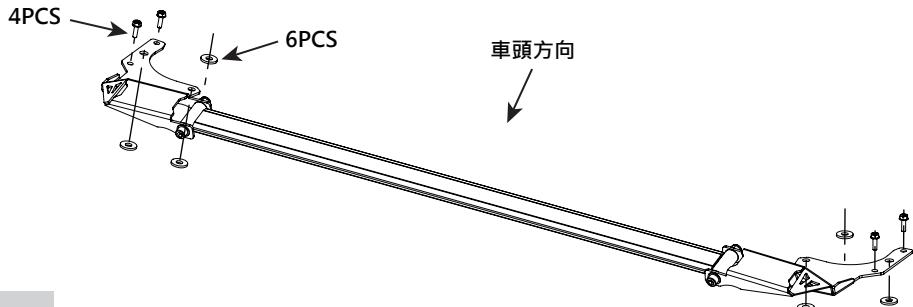

Installation tips 安裝提示



1. 須將"雨刷桿、雨刷蓋板、雨刷馬達、金屬蓋板"拆除

2. 將避震器上座螺帽拆下，安裝配件華司共6片，華司全部安裝在最下部分



3. 安裝避震器塔座支架注意，先將避震器外側鎖點鎖上，並上扭力60Nm

4. 安裝金屬蓋板，使用配件螺絲鎖上左右兩端部分，共4支(因原廠螺絲較短，無法使用原廠螺絲)



5. 安裝雨刷馬達總成，再將雨刷蓋板及雨刷連桿安裝回去，最後將鋁合金橫桿鎖上

6. 安裝完成示意圖

Warning 安全提示

Installation should only be performed by licensed mechanics who have the necessary skill and tools to do the job correctly and safely.

安裝需由合格的專業技師及工具執行，以確保安裝過程的正確與安全。

When swapping the suspension kits, be sure to note the routing and mounting position of all wires, cables and bolts orientation, certain damage might be caused by reinstalling differently from the original factory position. Please refer to factory manual for proper installation and safety stands.

當更換您車輛的懸吊套件時，請記下您的線組與管線安裝位置，非原廠相同的安裝位置可能會造成元件之損壞，造成車輛的危險。請參考原廠車輛手冊。



TEL: +886 3 5370822 FAX: +886 3 5373027

E-MAIL: info@hardrace.com WEBSITE: WWW.HARDRACE.COM

