


Application 適用車型

Ford Focus Mk3 '12-18

Components 內含配件

① Strut Brace 引擎室拉桿總成	1PCS
Bolt 螺絲 (M10x1.5x80)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

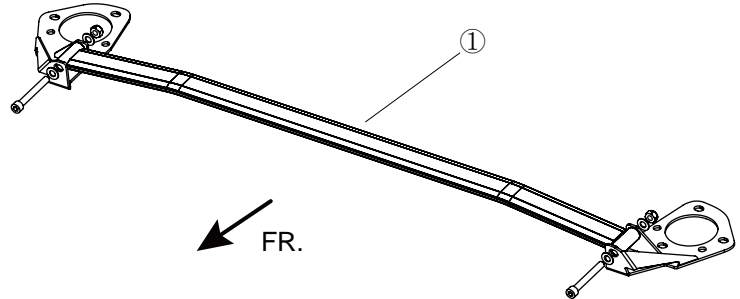

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the wiper arms, cowl panel and the bracket bolted to the strut mounts and wiper motors.
拆卸雨刷臂、雨刷蓋板以及鎖在避震器上座和雨刷馬達上的黑色支架。



2. Position ① Strut brace over the strut mounts, then re-install the bracket on to the brace and tighten all the nuts and bolts back.



將 ① 引擎室拉桿總成放置在避震器上座，再將拆下的支架裝回置於拉桿上方，並鎖上所有螺帽。

3. Install the cowl panel and wiper arms back.
裝回雨刷蓋板及雨刷臂。

Illustration of installed state.
完成示意圖

