


Application 適用車型

Nissan Tiida C12 '11-

Components 內含配件

- | | |
|-----------------------|------|
| ① Strut Brace 引擎室拉桿總成 | 1PCS |
| ② Bolt 螺絲 | 4PCS |

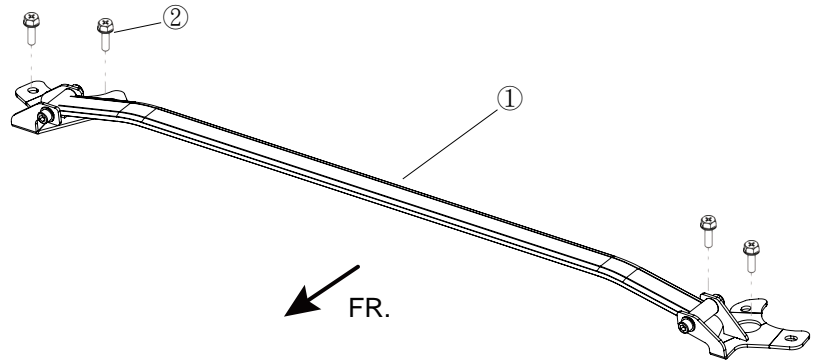

Caution 注意事項

- Installation should be performed by licensed mechanics with necessary skill and tools to ensure safety.
- Before installation, be sure to note the routing, position of all wires and cables. Please refer to factory manual for proper installation.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行，以確保安全。
- 安裝前請記下線路安裝路徑及位置，請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the front and inner bolts of the strut mounts on both sides, and the intake box bracket nut from the stud on driver side strut mount (Circled)
拆卸兩側避震器上座內側及前方螺絲以及駕駛座側的進氣盒支架和螺帽（畫圈處）



2. Position ① Strut Brace over the strut mounts and and tighten using ② Bolts to replace the stock ones.
將 ① 引擎室拉桿 裝上避震器上座，並使用 ② 螺絲 取代原本的螺絲鎖回兩側避震器上座。



3. Install the intake box bracket back to the stud on driver side strut mount and tighten the nut.
將進氣管支架裝回駕駛座側避震器上座之螺柱。



4. Illustration of installed state.
完成示意圖

