


Application 適用車型

Infiniti Q50/Skyline '14-present (V37)

Components 內含配件

① Strut brace 引擎室拉桿	1PCS
Bolt 螺絲 (M10x1.5x75)	2PCS
Nut 螺帽 (M10x1.5-17x10)	2PCS
Washer 華司 (20.8x10.7x2)	4PCS

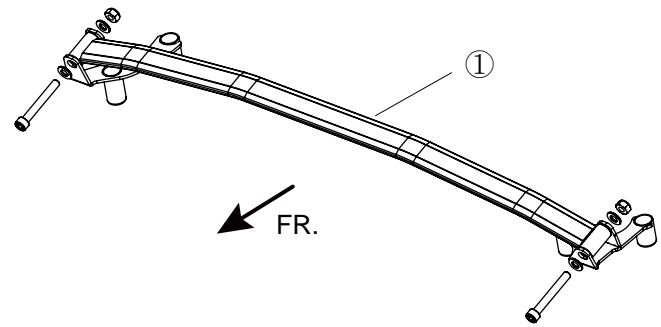

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the two inner-most nuts of the passenger side(LHD) strut mount. Then carefully locate the bracket of ① Strut brace onto the strut tower and reinstall the nuts to the strut tower. (See figure 1)

拆卸副駕駛座側避震器上座的最內側兩個螺帽，接者將 ①引擎室拉桿置於避震塔上，並將螺帽鎖回避震器上座。(請參考圖一)

2. For the driver side(LHD), remove the forward and outer-most nuts and position the other side of the brace onto the strut tower. Once the brace is in place, reinstall the nuts to the strut tower. (See figure 2)

拆卸駕駛座側最靠前方及最靠外側的螺帽，並將引擎室拉桿另一端置於避震塔，最後將螺帽鎖回避震器上座。(請參考圖二)

Illustration of installed state
完成示意圖

