

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿


#Q0019

Application 適用車型

Mazda CX-3 '15-present

Components 內含配件

① Strut brace-R 後行李箱拉桿-右	1PC
② Strut brace-L 後行李箱拉桿-左	1PC
③ Bolt 螺絲 (M10X1.25X25)	1PC
④ Nut 螺帽 (M10X1.25X25)	1PC
⑤ Washer 華司 (20.8x10.7x2)	1PC

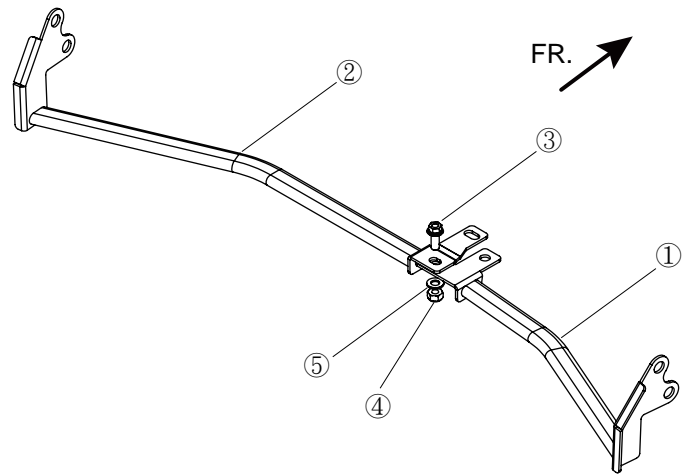

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the interior trim panels on both sides of the trunk and cut the brackets inside the trim panels off. (See figure 1)
拆卸行李箱兩側的塑膠內裝飾板，並切除飾板內側的支架。(請參照圖1)
2. Remove the bolts on brackets that hold the second roll seat in the middle and on both sides. (See figure 2)
拆卸後排座椅中間以及左右兩側支架的螺絲。(請參照圖2)
3. Place ① Strut brace-R and ② Strut brace-L into the holes on seat brackets. Notice that the bracket on left bar should be on the right one when fitting the middle part. (See figure 3)
將① 後行李箱拉桿-右及② 後行李箱拉桿-左對準座椅支架鎖點置入，請注意安裝中間鎖點部分時左拉桿應置於右拉桿上。(請參照圖3)
4. Install and tighten all the bolts on seat brackets. Place ③ Bolt into the hole in the middle of the brace and tighten using provided ④ Nut with ⑤ Washer.
鎖回所有座椅支架螺絲，並於拉桿中央孔內置入配件③螺絲，並使用⑤華司及④螺帽鎖上。
5. Install the trim panels back to the trunk.
完成後將內裝飾板裝回行李箱兩側。

