

# Installation Instructions

## 安裝說明書


REAR SWAY BAR  
後防傾桿 - 17MM  
#Q0088

### Application 適用車型

Hyundai Elantra Sport AD '16-present

### Components 內含配件

- |                            |      |
|----------------------------|------|
| ① Stabilizer bar 防傾桿桿身     | 1pcs |
| ② Stabilizer bushing 防傾桿橡皮 | 2pcs |
| ③ Bushing clamp 橡皮固定環      | 2pcs |

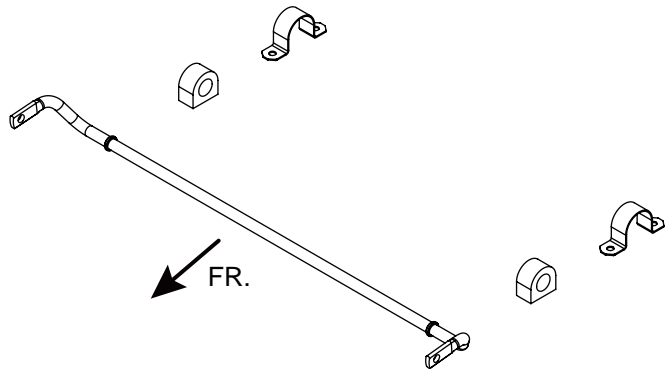

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Remove rear stabilizer links from the factory stabilizer bar.  
將後李仔串從原廠防傾桿上卸下。
2. Unbolt factory rear stabilizer bushing clamps to remove the factory bar from the subframe.  
卸下原廠防傾桿橡皮固定環螺絲後即可將原廠防傾桿從車上取下。
3. Install supplied 2. Stabilizer bushings on both sides of 1. Stabilizer bar. Notice that the bushings should be installed to the outer side of bushing stopper rings.  
使用配件 2. 防傾桿橡皮 安裝至 3. 防傾桿桿身，請注意橡皮須安裝於桿身定位環的外側。
4. Fit supplied 3. Bushing clamps to the bushings, then install the new clamps with the bar and bushings to the frame using the original bolts. Once in place, install stabilizer links to the new bar.  
將配件 3. 橡皮固定環 裝入橡皮，沿用原廠螺絲將新的固定環連同橡皮及桿身裝回車上，並於完成後將李仔串鎖上新的防傾桿。

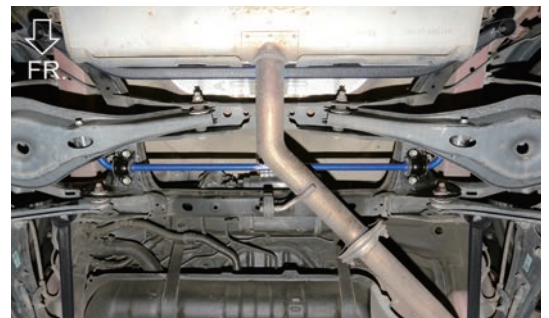
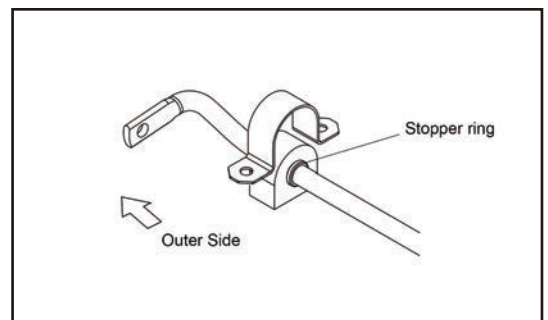


Illustration of installed state  
安裝完成示意圖