
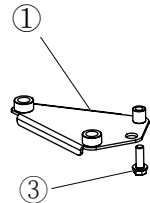


Application 適用車型

Toyota Alphard/Vellfire (GGH30) '15-Present

Components 內含配件

- | | |
|-------------------------------|------|
| ① Rear lower brace-RH 後下結構鈹-右 | 1PCS |
| ② Rear lower brace-LH 後下結構鈹-左 | 1PCS |
| ③ Bolt 螺絲 (M8x1.25x40) | 2PCS |



Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Jack up the vehicle to get access to the rear trailing arms and sub-frame brackets on both sides.
將車輛升起後找到後方兩側的拖曳控制臂及副車架支架。
2. Remove the bolts securing rear trailing arm bushings, sub-frame brackets and stock middle braces on both sides.(Circled)
卸下控制臂鐵套、副車架支架以及原廠結構桿的螺絲。(畫圈處)
3. Position ①Rear lower brace-RH & ②Rear lower brace-LH as shown in figure 2. Install the factory middle brace with supplied ③Bolts, while using original bolts for the remaining part.
依照圖表二置入 ①後下結構鈹-右 及 ②後下結構鈹-左 後使用配件 ③螺絲 裝上原廠結構桿，其餘部份沿用原螺絲鎖

Illustration of installed state
完成示意圖

