

Installation Instructions

安裝說明書

FRONT STRUT BRACE

引擎室拉桿

#Q0223


Application 適用車型

Volvo XC90 '15-present

Volvo XC60 '18-present

Components 內含配件

| | |
|-------------------------|------|
| ① Strut brace 引擎室拉桿 | 1PCS |
| Bolt 螺絲 (M10x1.5x80) | 2PCS |
| Nut 螺帽 (M10x1.5-17x10) | 2PCS |
| Washer 華司 (20.8x10.7x2) | 4PCS |

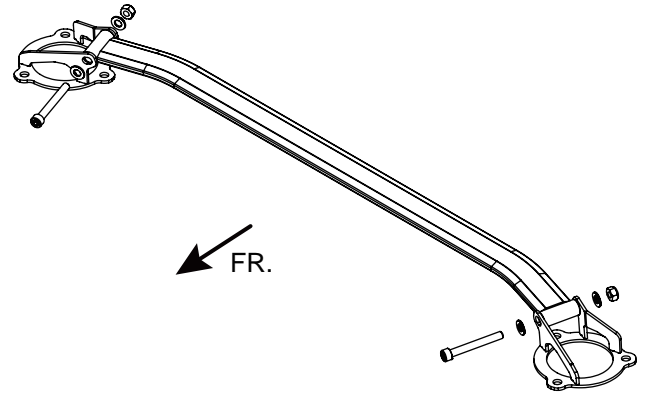

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

Instructions 安裝說明

1. Remove the bolts from the strut towers on both sides.
(See figure 1)

拆卸兩側避震塔上的螺絲 (請參考圖一)



2. Position the brackets of ①Strut Brace to the strut towers on both sides, then reinstall the removed bolts to secure the brackets.

將 ① 引擎室拉桿 兩側的支架安裝至兩側避震塔，並鎖回已拆下的螺帽以固定支架。

3. Install the cross bar to the brackets with supplied bolts, nuts and washers. (See components figure & figure 2)

使用配件中的螺絲、螺帽、華司安裝中間桿，使桿身固定於兩側支架。

(請參考配件圖及圖二)



Illustration of installed state

安裝完成示意圖