


### Application 適用車型

Volvo XC60 '18-present  
Volvo XC90 '15-present

### Components 內含配件

① Brace 結構桿桿身 1PCS

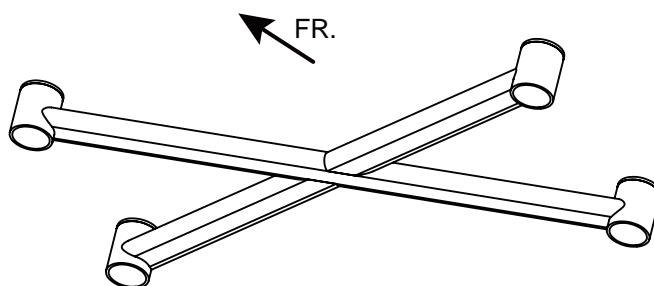


### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

### Instructions 安裝說明


1. Remove the four bolts from the middle of the vehicle on both sides. (See arrows in figure 1)

拆卸車身中段的四個螺絲。(請參考圖表一箭頭)

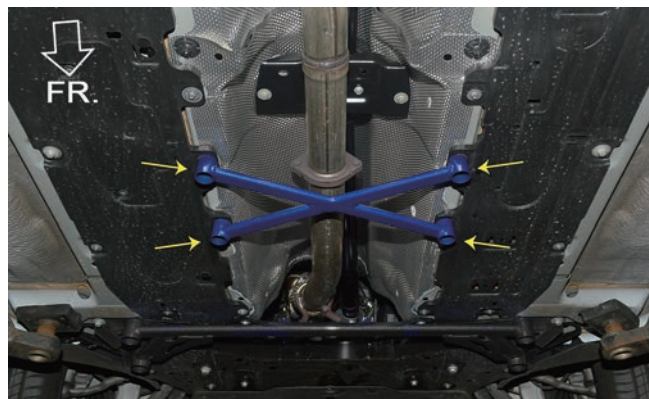

2. Position ①Brace to the vehicle. (See figure 1)

將 ①結構桿桿身 組裝於車輛。(請參考圖表一)

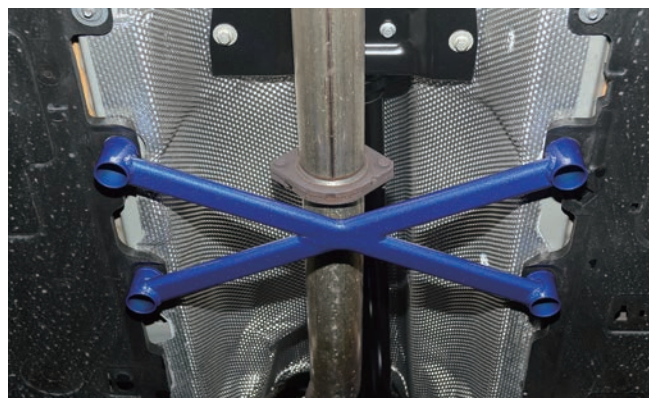

3. Once in place, reinstall the removed factory bolts to secure the brace.

沿用已拆下的原廠螺絲安裝後端鎖孔以固定桿身。

Illustration of installed state.

安裝完成示意圖