

# Installation Instructions

## 安裝說明書


R. SUBFRAME REAR BRACE  
後樑後拉桿  
#Q0239

### Application 適用車型

Mazda 6/ Atenza '12-present

Mazda CX-5 '12-16

Mazda CX-9 '17-present

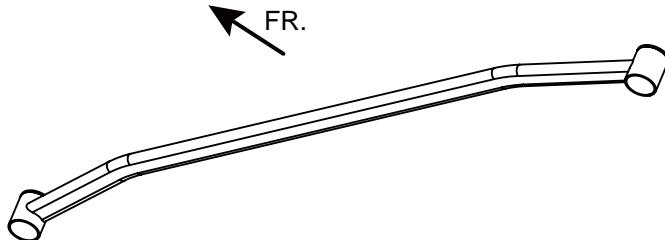

### Components 內含配件

① Brace 結構桿

1PCS

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure proper installation and safety, or damage to the product or vehicle may occur.
- Note the routing and position of wires and cables before installation. Please refer to factory manual.
- Tighten bolts and nuts firmly using handtools, or with specified torque if mentioned.
- 安裝需由合格的專業技師及工具執行以確保安裝正確及安全，否則可能對產品或車輛造成傷害。
- 安裝前請記下線路安裝路徑及位置，或請參考原廠手冊。
- 請使用手動工具確實鎖緊螺帽及螺絲，或依照說明中標註的扭力上鎖。

### Instructions 安裝說明

1. Remove the bolts from rear subframe on both sides. (See figure 1)  
拆卸後副車架兩側的螺絲。(參考圖表一)



2. Install Brace to the vehicle, then reinstall the bolts to secure the brace.  
安裝 結構桿，並鎖回螺絲以將桿身固定。

#### Note 提示

- Support rear subframe with a jack stand before removing the bolts.  
拆卸螺絲前請使用千斤頂將副車架撐住。

Illustration of installed state  
安裝完成示意圖

