

Installation Instructions

安裝說明書

FR. SUBFRAME BRACE

前樑兩點拉桿

#Q0337

Application 適用車型


Suzuki Swift '17-
Suzuki Swift Sport '17-

Components 內含配件

① Brace 結構桿.....1pcs


Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

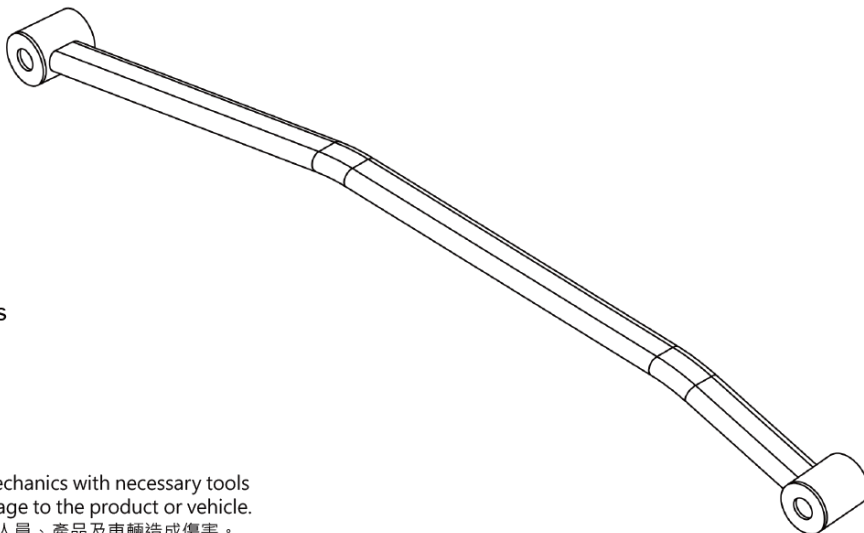

Instructions 安裝說明

1. Remove control arm front bolts on both sides.
(See figure 1)
拆卸兩側前下控制臂前螺絲。(參考圖表一)
2. Position the brace on the vehicle. (See figure 2)
安裝結構桿。(參考圖表二)
3. Reinstall the bolts to secure the brace.
鎖回螺絲以將桿身固定。

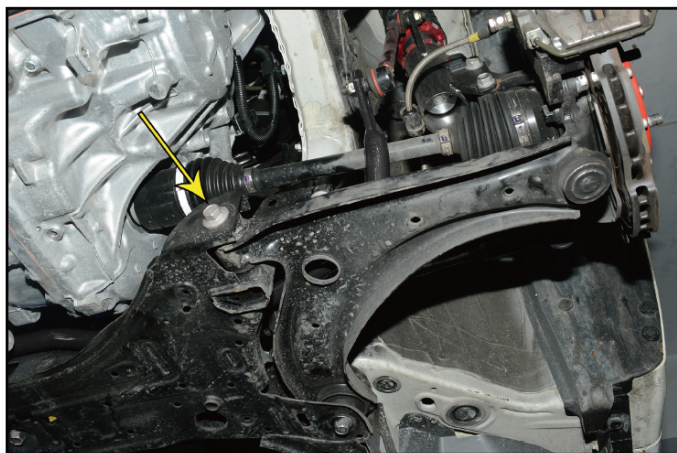

See figure 1 (參考圖表一)



See figure 2 (參考圖表二)



Illustration of installed state
安裝完成示意圖