

Installation Instructions

安裝說明書

REAR SUBFRAME BRACE

後樑拉桿


#Q0479

Application 適用車型

BMW 5-SERIES G30/G31

Components 內含配件

- ① Brace 結構桿桿身.....1pcs
- ② Bolt 螺絲 (M8x1.25x25).....1pcs
- ③ Nut 螺帽 (M8x1.25x12x7.5).....1pcs
- ④ Washer 華司 (26x8.4x2).....2pcs

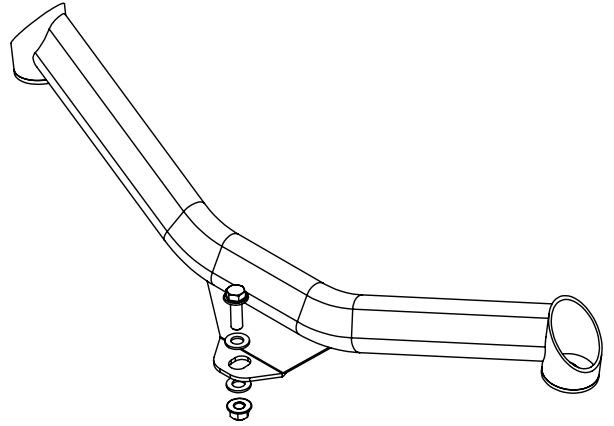

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Raise and safely support the vehicle.
將車輛升起。
2. Remove the rear lower toe control arm inner bolts.
將後束角控制臂內側的螺絲拆下。
3. Install the brace to rear subframe.
將結構桿桿身安裝至副車架。
4. Reinstall the control arm bolts.
完成後將螺絲鎖上。
5. Install supplied M8 bolts, nuts and washers to the central mounting hole of subframe.
使用附件之M8螺絲、螺帽以及華司，鎖上副車架中央的預留鎖孔。

