

Installation Instructions

安裝說明書

REAR ADD-ON SWAY BAR

後加裝型防傾桿, 15mm


#Q0505

Application 適用車型

NISSAN KICKS 2016+ (P15)

Components 內含配件

- | | |
|-------------------------------|-------|
| ① Sway bar 防傾桿桿身..... | 1pcs |
| ② Lower bracket-RH 下支架-右..... | 1pcs |
| ③ Lower bracket-LH 下支架-左..... | 1pcs |
| ④ Upper bracket 上支架..... | 2pcs |
| ⑤ Bolt 螺絲 (M10x1.25x30)..... | 4pcs |
| ⑥ Bolt 螺絲 (M10x1.25x25)..... | 4pcs |
| ⑦ Nut 螺帽 (M10x1.25-14x9)..... | 8pcs |
| ⑧ Washer 華司 (26x10.5x2)..... | 10pcs |

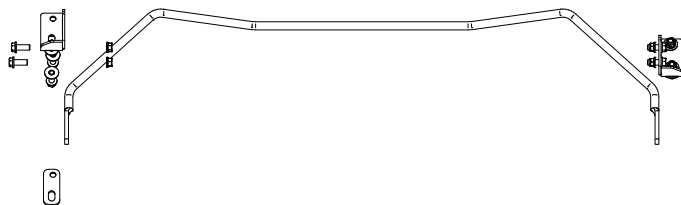

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明


1. Disconnect rear shock absorber from axle beam on one side.
(Disconnect one side at a time only)

將減震從後樑上卸下。(先卸下一邊以防止彈簧掉出)




2. Install the brackets to shock absorber mountings using supplied M10 hardware on the side with shock absorber removed.
(Please note that 2 additional washers are required for LH side.)

使用M10配件，將下支架由減震筒鎖點處由下安裝鎖上。
(請注意安裝左側時須加上兩片華司)

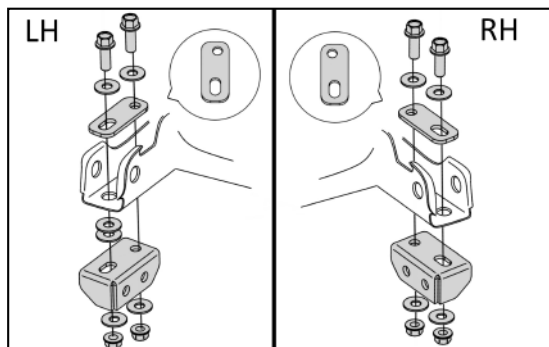

3. Reinstall the shock absorber. Then repeat the procedure 1~3 for the other side.

將減震筒固定螺絲鎖回。完成後重複步驟1~3安裝另一側的支架。

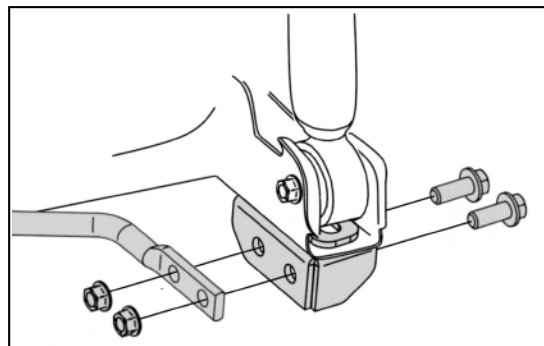

4. Install the sway bar to brackets using supplied M10 hardware.

使用M10配件，將防傾桿安裝至兩側支架。

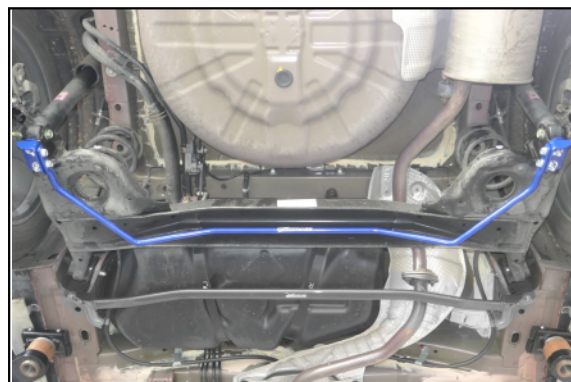


Illustration of installed state
安裝完成示意圖