

Installation Instructions

安裝說明書

REAR SWAY BAR

後防傾桿, 22mm


#Q0615

Application 適用車型

TESLA MODEL 3 '17-


Components 內含配件

- ① Sway bar 防傾桿桿身.....1pcs
- ② Bushing 橡皮2pcs
- ③ Bushing clamp 橡皮固定環.....2pcs
- ④ End link 防傾桿連接桿 (李仔串).....2pcs
- ⑤ Bolt 螺絲4pcs
(Button head hex 內六角, M10x1.5x25)
- ⑥ Nut 螺帽 (Flange 凸緣, M10x1.25-14x9)....4pcs
- ⑦ Washer 華司 (20.8x10.7x2).....4pcs

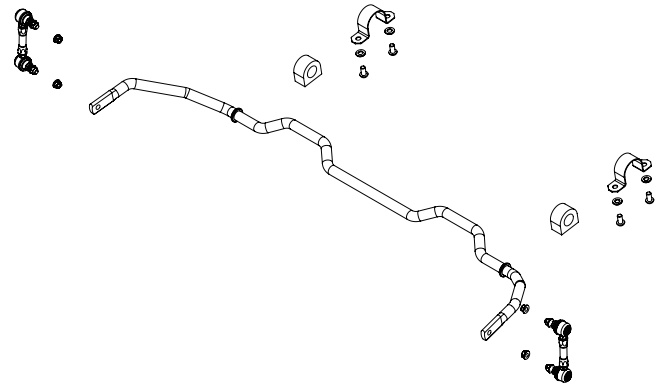


Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

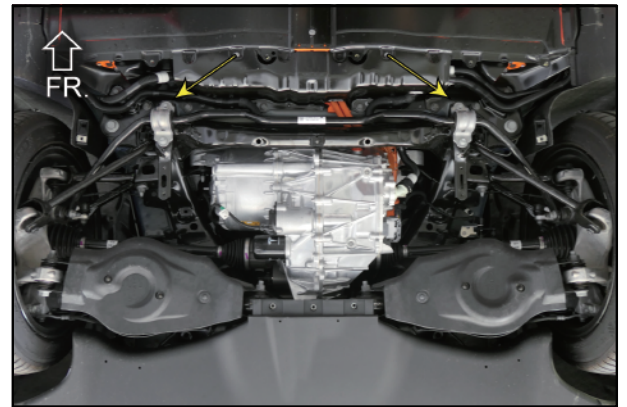

Instructions 安裝說明

1. Raise and safely support the vehicle.
將車輛升起。
2. Remove sway bar end links.
將防傾桿連接桿(李仔串)拆下。
3. Remove the OE sway bar and bushing clamps.
將原廠防傾桿及固定環拆下。
4. Install supplied bushings and bushing clamps onto the new sway bar.
使用附件橡皮及固定環安裝至新的防傾桿桿身。
5. Install the new sway bar to vehicle using supplied bolts, nuts and washers.
使用附件螺絲、螺帽及華司。將新的防傾桿安裝至車輛。
6. Install supplied sway bar end links.
安裝附件防傾桿連接桿(李仔串)。

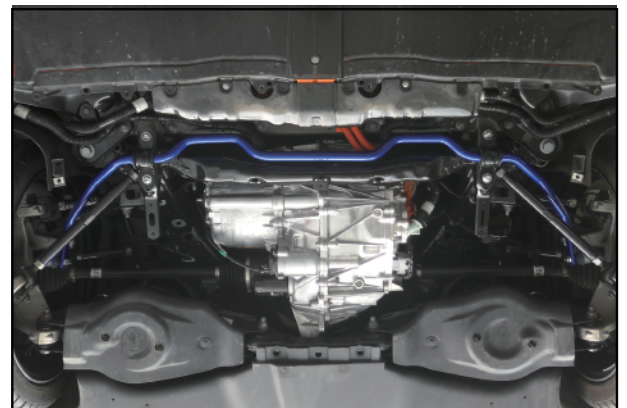

► Illustration of installed state 安裝完成示意圖