

Installation Instructions

安裝說明書

FRONT LOWER ARM SKID PLATE

前下三角架護板


#Q0645

Application 適用車型

Mazda BT-50 '11-20
Ford Usa Ranger '12-18
Ford Usa Everest '15-18

Components 內含配件

- ① Arm Skid Plate 三角架護板(R/L).....2pcs
- ② Bolt 螺絲(M8x1.25x30).....6pcs
- ③ Retaining tab 鎖付用鐵片(106x25).....2pcs
- ④ Retaining tab 鎖付用鐵片(96x25).....2pcs
- ⑤ Retaining tab 鎖付用鐵片(69x25).....2pcs

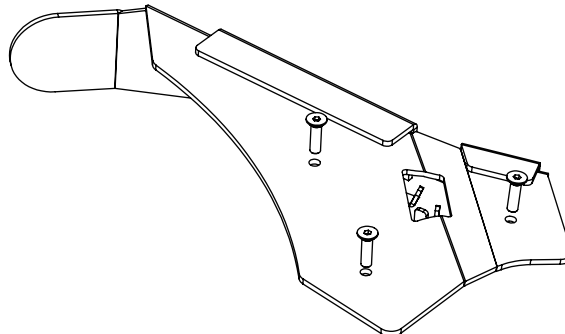

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle.
安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual.
安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned.
安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Place the metal retaining web on the control arm.

Make sure the metal retaining web can hang in the central hole.

將鎖付用鐵片，由三角架下方孔洞放，確認三角架鎖付鐵片與中心孔洞固定抓牢。



2. Tighten the skid plate using M8x1.25x30 Bolt.

使用 M8x1.25x30 的螺絲將鐵片與護板鎖在三角架上。

