

Application 適用車型

MG HS '19-

Components 內含配件

- ① Center bar 中間桿.....1pcs
- ② RH side bracket 右側支架.....1pcs
- ③ LH side bracket 左側支架.....1pcs
- ④ Bolt - Flange 凸緣螺絲 (M10x1.25x55).....1pcs
- ⑤ Bolt - Flange 凸緣螺絲 (M10x1.25x20).....1pcs
- ⑥ Nut - Flange 凸緣螺帽 (M10x1.25-14x9.5).....1pcs
- ⑦ Fuse box relocation kit 保險絲盒前移配件包 1pcs

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

Instructions 安裝說明

1. Remove wiper arms, cowl panel, and front support panel to access the strut towers.
將兩刷臂、兩刷蓋板及前端擋火牆蓋板拆下。找到避震塔。
2. Remove the strut mount nuts and place the RH & LH side bracket on to the strut tower. The reinstall the factory strut mount nuts to secure the brackets.
將避震器上座螺帽拆下並安裝左側及右側支架。完成後將原避震器上座螺帽鎖回車輛。
3. Install the center bar using supplied M10 hardware.
使用附件的M8螺絲及螺帽安裝中間桿。
4. Reinstall the support panel, cowl panel and wiper arms.
將前端擋火牆蓋板、兩刷蓋板及兩刷臂裝回車輛。

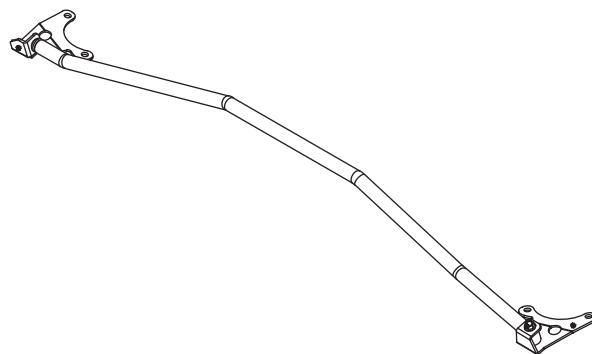


Illustration of installed state 安裝完成示意圖

Installation Instructions


安裝說明書

FRONT STRUT BRACE

引擎室拉桿

#Q1039


* For PHEV models, please install the fuse box relocation kit before fitting the strut brace.
若為PHEV車型，安裝引擎室拉桿前，須安裝保險絲盒前移配件。

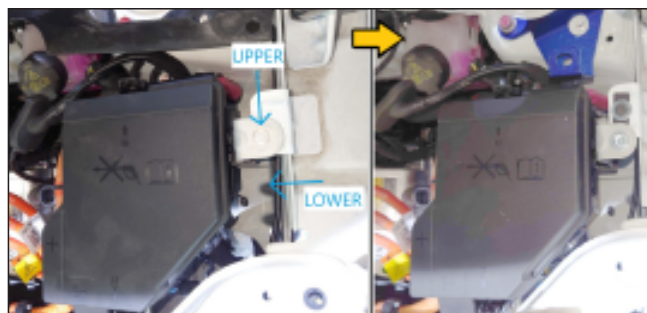

Upper bracket 上端支架



Lower bracket 下端支架

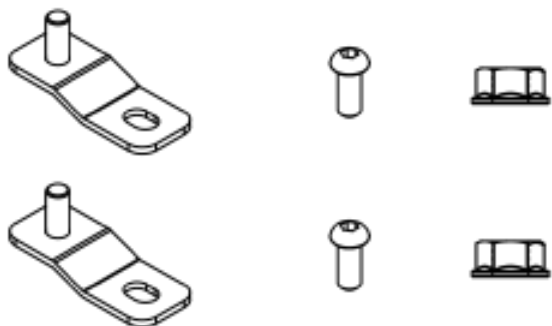

Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全，安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置，有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲，如有特別註明請依照說明指示的扭力上鎖。