

### Application 適用車型


TOYOTA GR86 ZN8 '22-  
SUBARU BRZ ZD8 '22-

### Components 內含配件

- ① Brace 結構桿.....1pc
- ② Wiring harness mounting bracket  
線組固定支架 .....1pc

### Caution 注意事項

- Installation is recommended to be performed by licensed mechanics with necessary tools to ensure safety. Incorrect installation may cause injury, damage to the product or vehicle. 安裝建議由合格的技師及工具執行以確保安全。安裝錯誤可能對人員、產品及車輛造成傷害。
- Note the routing of wires and cables before installation, or please refer to factory manual. 安裝前請事先記下線路的安裝路徑及位置以維持原廠配置。有疑問時請參考原廠手冊。
- Tighten bolts and nuts firmly by using handtools, and with specified torque if mentioned. 安裝過程請使用手動工具確實鎖緊螺帽及螺絲。如有特別註明請依照說明指示的扭力上鎖。

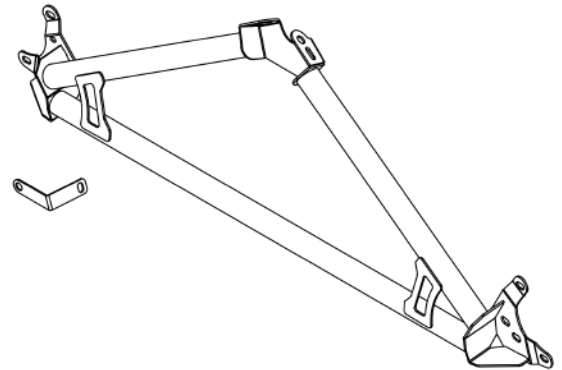

### Instructions 安裝說明

1. Remove the strut mount nuts and firewall bolts.  
將兩側避震塔上的螺帽以及擋火牆中央的螺絲拆下。
2. Place supplied brackets onto the strut towers.  
將結構桿支架安裝於避震塔上。
3. Install supplied wiring harness mounting bracket on to the RH side strut mount innermost stud.  
將附件引擎線組固定支架安裝至右避震上座最內側的螺柱上。
4. Reinstall the strut mount nuts and firewall bolts.  
將避震器上座螺帽及擋火牆螺絲鎖回車輛。  

Recommend torque spec 建議扭力值

Strut mount nuts 避震器上座螺帽: 23Nm  
Firewall bolts 擋火牆端螺絲: 16Nm
5. Secure the engine wiring harness to the mounting bracket.  
將引擎線組固定於支架上。



Illustration of installed state 安裝完成示意圖